


How to determine your license file serial number

Starting in Version 16, this option will only apply if you are using a locked license type.

If you have the software running, select **Help > About**. The dialog that opens shows the serial number of your current license as shown below.

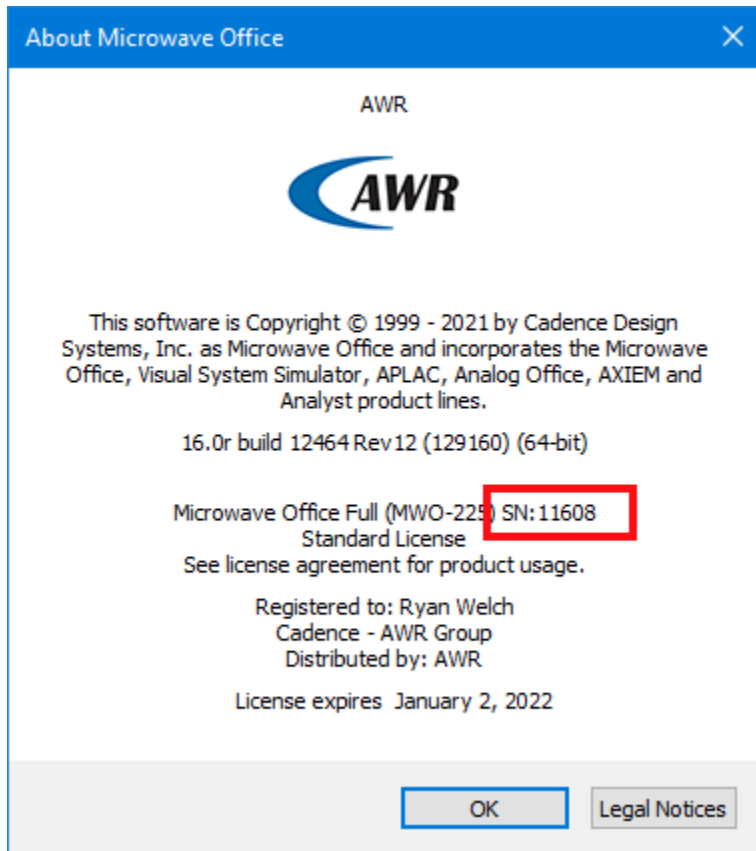

Alternatively, you can open your license file in a text editor and find the **SN=** text in the file.

```
INCREMENT MWO_225 awrd 16.0 02-jan-2022 uncounted \  
VENDOR_STRING="F:Ryan Welch:Cadence - AWR Group:AWR" \  
HOSTID=DISK_SERIAL_NUM=00000000 ck=183 SN=11608 \  
START=06-Jul-2021
```

If you are using a floating license, the SN in this dialog will be the HOSTID of the license server on which you are using.