

# Calculate RMS Error Between Two Measurement Results

## To run this script

Select **Scripts > Graphs > Calculate\_RMS\_Error** from the Menus.

Or, in versions that support the script, you can run the utility directly from this page using this button.

## Description

This script will calculate the RMS error between two measurement results. The measurement results are selected by a user interface and then the RMS value is returned as a single number. Figures below shows the process of running the script until you get the result.

