

Hardware Key Memory

Problem

Some customers work in secure areas that do not allow any hardware with memory to leave the work area. This poses a problem for some customers trying to use AWR's hardware keys in these areas.

Summary

The hardware key used by AWR is the [Sentinel](#) supplied HASP HL Pro RoHS USB dongle part number FLEXID-ALA-8626. These keys are purchased from Sentinel by Flexera, the vendor for FLEXIm, who burns a unique serial number into them.

These devices as delivered by AWR are a read-only device. When attached to a computer system they are not a writable device and no data can be stored on them.

Downloads

The attached "[Certificate of HASP Memory Volatility](#)" contains more details.