

Clean Project - Delete Unwanted Project Tree Items by selecting Top Level Documents

To run this script


Select **Scripts > Project > Clean_Project_Choose_Top_Level_Docs** from the Menus.

Or, in versions that support the script, you can run the utility directly from this page using this button.

Description

This script cleans up a project by deleting any Graphs, Measurements, Schematics, System Diagrams, Data Files, Netlists, and EM Structures not needed for the current active (not disabled) measurements in the project. This script is commonly used before sending a project to a colleague or to AWR support as an easy way to cut down a complicated project to a much simpler one.

When the script is run, the dialog below will be displayed. Refer to [Clean Project](#) script page and see **Choose Top Level Docs** section for more information

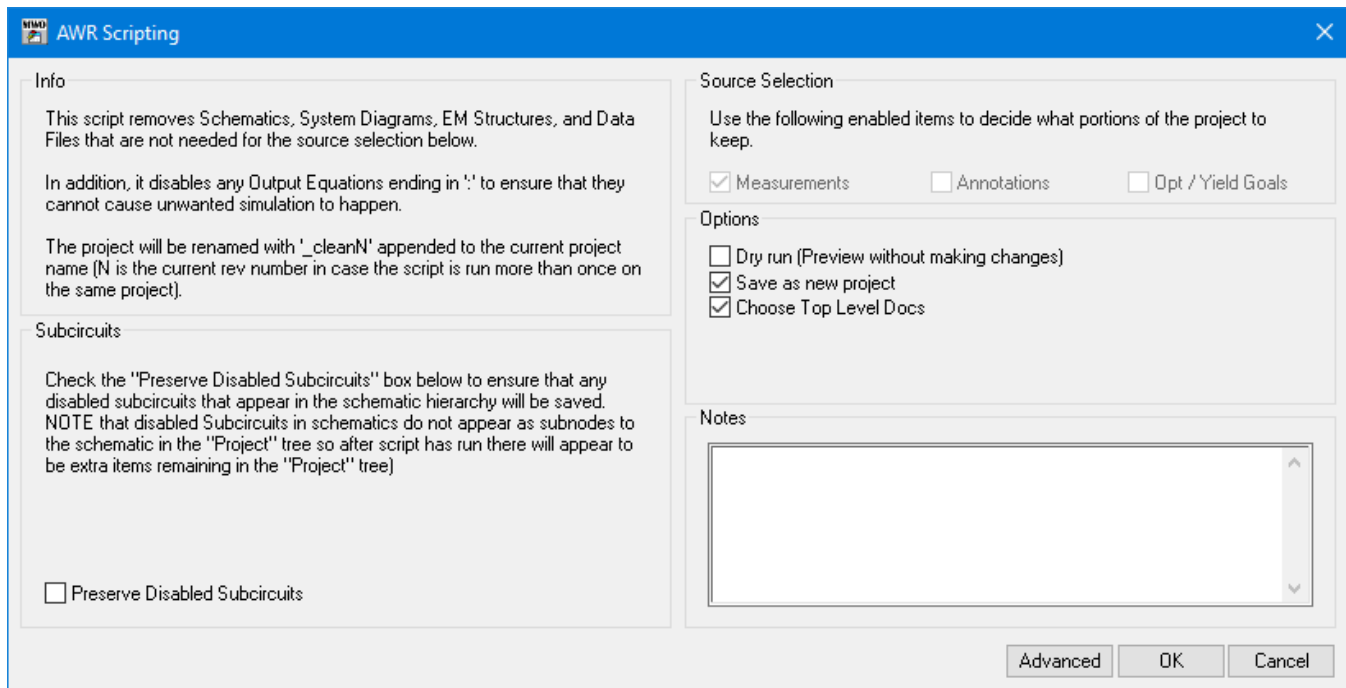

The screenshot shows the 'AWR Scripting' dialog box. It has a blue title bar with the AWR logo and a close button. The dialog is divided into several sections:

- Info:** Contains two paragraphs explaining the script's function: removing unnecessary project items and renaming the project to include a revision number.
- Subcircuits:** Contains a paragraph about preserving disabled subcircuits and a checkbox labeled 'Preserve Disabled Subcircuits'.
- Source Selection:** Contains a heading and a paragraph about selecting items to keep, with checkboxes for 'Measurements' (checked), 'Annotations', and 'Opt / Yield Goals'.
- Options:** Contains a heading and three checkboxes: 'Dry run (Preview without making changes)' (unchecked), 'Save as new project' (checked), and 'Choose Top Level Docs' (checked).
- Notes:** A large text area for additional notes.

At the bottom right, there are three buttons: 'Advanced', 'OK', and 'Cancel'.